



2007-2013 Tundra 2008-2020 Sequoia

## Prodigy P3 Brake Controller

### Mounting Plate

Part# TP3-7PLT

For Tundra and Sequoia with Bucket Seats and Console only.

1. Remove Driver side sill plate and kick panel
2. Remove lower dash panel by removing two 10mm bolts, you can let panel hang down and rest on floor.
3. Remove metal panel behind lower dash panel also by removing two 10mm bolts
4. Set parking brake and move shifter to low gear.
5. Remove center dash panel containing the two auxiliary power outlets by using a pry tool or you can try to just pull it out. Do not pull on the auxiliary port covers as they may break. See Fig. A
6. Once removed, disconnect power port plugs. See Fig. B
7. Remove auxiliary power ports from panel. Use a small pick tool to pry up on tabs and push port from back out of the front of the panel. Then remove the covers from the panel. See Fig. C
8. Place TP3-7PLT on front of panel, and using a 9/64ths drill bit, drill out the four holes in front of plate through the panel.
9. If your power port covers flip up, you will need to change the notch in the front of the panel for the auxiliary ports. See Fig. D
10. Using provided screws and nuts, secure the TP3-7 plate onto the front of the panel.
11. Cut back of cubby box off 2/12 inches from end of the box using a cutoff wheel or hacksaw.
12. On each side of the panel, measure 15/16" up from the bottom fin and use a 3/16" drill bit to drill a hole on side of panel to secure brake controller.
13. Reinstall power port covers, then install power ports. Note the rib on the side of the power port and align with the notch in the power port cover.
14. Install your P3 Brake controller into the front of the panel with the manual control lever facing down. Using the two screws provided, secure the controller to the panel in the holes previously drilled.
15. In order for the wiring harness to reach from the driver side kick panel to the controller, it is necessary to extend the harness at least 6 inches. Use the same gauge wire when making the extension.
16. Find the brake controller wire harness plug in the driver side kick panel above the parking brake assembly. (Should be taped to another harness)

17. Plug in the brake controller harness to the truck and run under dash over to the center of the dash where the brake controller will be mounted.
18. Plug brake controller harness into the brake controller and make sure there is power(should be lit up at this point), reconnect power outlet plugs and reinstall dash panel
19. Reinstall lower dash sub panel and lower dash panel, install kick panel and sill plate.
20. Connect trailer to and test operation.



Fig. A



Fig. B



Fig. C

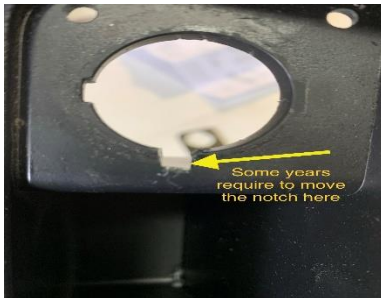


Fig. D

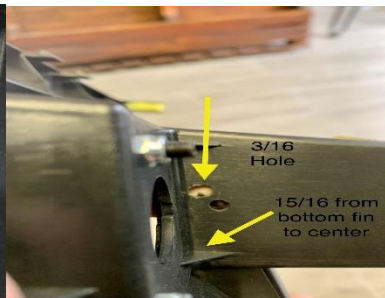


Fig. E



Fig. F

**IF YOU HAVE ANY QUESTIONS INSTALLING, PLEASE CALL EARL AT 951-858-3418 BEFORE RETURNING! NO RETURNS WILL BE ACCEPTED WITHOUT PRIOR AUTHORIZATION.**